SPECIFICATION SHEET JFW MODEL 50PA-683 HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 698-3000 MHz

Configuration 6 x 2 Handover System

(see block diagram 092-5642 for attenuator addressing)

(all ports are bi-directional)

(full fan-out i.e. every path has its own attenuator)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 3RU high

Impedance 50 Ohms nominal

Attenuation Range 0-127 dB in 1 dB steps

Startup/Default States Maximum attenuation (see ATTEN STARTUP command)

(configurable) DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command)

VSWR 1.7:1 maximum

< 1.5:1 typical

Insertion Loss 27.5 dB maximum

25.5 dB typical

Attenuation Accuracy \pm 0.75 dB or 2% maximum

± 0.50 dB or 2% typical
(whichever is greater)
(guaranteed monotonic)

Isolation 40 dB minimum (Input to Input)

50 dB minimum (Output to Output)

RF Input Power +26 dBm average (Input Ports)

+30 dBm average (Output Ports)

Switching Speed 5 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50PA-683 HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Attenuator Control Commands:

Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector SMA or N female

Temperature Range 0°C to +50°C

Physical Size See outline drawing 092-7116

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	10/25/2011		TRS 10/25/2011				
24239	09/09/2014	A	TRS 09/09/2014				

Page 2 of 2 JFW FORM E-7-F REV F