#### SPECIFICATION SHEET

### JFW MODEL 50PA-947

### PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 500-6000 MHz

Configuration 4 x 4 Handover Test System

(see block diagram 092-5895 for attenuator addressing)

(all ports are bi-directional)
(full fan-out configuration)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 3RU high

Impedance 50 Ohms nominal

Attenuation Range 0-95 dB in 1 dB steps

Startup/Default States Attenuators to 95dB at startup (see ATTEN command)

(configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET command)

Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 1.7:1 maximum 1.4:1 typical

Insertion Loss 31.3 dB maximum 29.4 dB typical

Power Divider Isolation 20 dB minimum

Attenuation Accuracy  $\pm$  0.50 dB  $\pm$  1-3 dB  $\pm$  0.75 dB  $\pm$  4-7 dB

± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)

RF Input Power +29 dBm average

Switching Speed 1 microsecond typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

### --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

## SPECIFICATION SHEET

## JFW MODEL 50PA-947

# PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Extended,

Fade Attenuator, Variable Attenuator Handover

MIMO Testing Commands:

Block, Set Block, Read Block, Read All Blocks, Fade

Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector N or SMA female

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Range 0°C to +50°C

Outline Drawing Numbers 092-7175 (50PA-947 N)

092-7175-01 (50PA-947 SMA)

ECR/ECN # DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
07/28/2015		TRS 07/28/2015				
26641 05/06/2016	A	TRS 05/06/2016				
	l				l	

Page 2 of 2 JFW FORM E-7-F REV F