SPECIFICATION SHEET

JFW MODEL 50BA-007-95

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency F	lange
-------------	-------

Configuration

Enclosure Type

Impedance

Attenuation Range

Startup/Default States (configurable)

VSWR

Attenuation Accuracy (guaranteed monotonic)

Insertion Loss

RF Input Power

Switching Speed

DC Supply

Manual Control

Remote Control

2-6 GHz

2 X 1 LC Handover Test System (see block diagram on drawing 092-7141)

Mini-benchtop

50 Ohms nominal

n Range 0-95 dB in 1 dB steps

es Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) Jog speed 5 (see JOG command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

2.2:1 maximum
< 2.0:1 typical</pre>

± 0.50 dB 1-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater)

12.5 dB maximum

+20 dBm average +25 dBm (no damage)

1 microsecond typical
(after command is received and processed)
(3 milliseconds typical processing time)

+12 Vdc (100-240 VAC AC/DC transformer included)

Momentary Lever Actuator Switches with 7-Segment LED Displays (tap to step, hold to jog) (jog speed range is 0-10) (jog speed set to 0 will disable all levers)

Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50BA-007-95

BENCHTOP PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands	Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt, Jog Speed
RF Connector	SMA female
Operating Temperature Range	0°C to +50°C
Physical Size	See outline drawing 092-7141

ECR/ECN # DATE REV APPR / DATE ECR/ECN # DATE REV APPR / DATE 01/31/2012 CLK 01/31/2012 24239 12/01/2014 А TRS 12/01/2014 25575 07/23/2015 TRS 07/23/2015 В JFW FORM E-7-F REV F