SPECIFICATION SHEET

JFW MODEL 50PA-899 LC HANDOVER TEST SYSTEM

Frequency Range	698-3000 MHz	
Configuration/Notes	12 x 1 LC Handover Test System (see block diagram 092-8075 for attenuator addressing) (all ports are bi-directional) (limited fan-out configuration) (the ADMIN password is located on rear panel)	
Enclosure Type	19 inch rack mount @ 3RU high	
Impedance	50 Ohms nominal	
VSWR	1.7:1 maximum 1.5:1 typical	
Attenuation Range	0-127 dB in 1 dB steps	
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command)	
	All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.	
Attenuation Accuracy (guaranteed monotonic)	± 0.7 dB or 2% maximum ± 0.5 dB or 2% typical (whichever is greater)	
Insertion Loss	14.0 dB maximum 13.2 dB typical	
Power Divider Isolation	21 dB minimum > 24 dB typical	
RF Input Power	+20 dBm average (Input ports) +30 dBm average (Output port)	
Switching Speed	5 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)	
AC Supply	100-240 VAC @ 47-63 Hz 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse#215-002, JFW#025-021	
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)	
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)	

--CONTINUED--

SPECIFICATION SHEET

JFW MODEL 50PA-899 LC HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands	Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt
RF Connector	SMA or N female
Operating Temperature Range	0°C to +50°C
Physical Size	See outline drawing 092-8074

ECR/ECN # DATE	REV APPR / DATE	ECR/ECN # DATE	REV APPR / DATE	
09/02/2014	TRS 09/02/2014			
2	JFW FORM E-7-F REV F			