SPECIFICATION SHEET JFW MODEL 50PA-900

HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 698-3000 MHz

Configuration/Notes 12 x 2 Handover Test System

(see block diagram 092-8077 for attenuator addressing)

(all ports are bi-directional)

(full fan-out i.e. every path has its own attenuator)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 4RU high

Impedance 50 Ohms nominal

VSWR 1.7:1 maximum

1.5:1 typical

Attenuation Range 0-127 dB in 1 dB steps

Startup/Default States Maximum attenuation (see ATTEN STARTUP command)

(configurable) DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command)

Attenuation Accuracy \pm 0.7 dB or 2% maximum (guaranteed monotonic) \pm 0.5 dB or 2% typical

(whichever is greater)

Insertion Loss 32 dB maximum

30 dB typical

Power Divider Isolation 21 dB minimum

> 24 dB typical

RF Input Power +26 dBm average (Input ports)

+30 dBm average (Output ports)

Switching Speed 5 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse#215-002, JFW#025-021

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50PA-900 HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector SMA or N female

Operating Temperature Range 0°C to +50°C

Physical Size See outline drawing 092-8076



Page 2 of 2 JFW FORM E-7-F REV F