SPECIFICATION SHEET JFW MODEL 50MS-304 SOLID STATE MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 2-6 GHz

Configuration 6 x 6 Non-Blocking Matrix (See block diagram 092-7408)

(Unused input ports are self-terminating) (Unused output ports are self-terminating)

(all ports are bi-directional)

(the ADMIN password is located on rear panel)

Startup/Default States

(configurable)

All ports off at startup (see MATRIX command)

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

Enclosure Type 19 inch rack mount @ 5RU high

Impedance 50 Ohms nominal

VSWR 1.5:1 typical 1.7:1 maximum

Insertion Loss 16.5 dB nominal @ 2GHz 18.5 dB nominal @ 6GHz

Output to Output - 18 dB minimum (If connected to same Input)
Output to Output - 70 dB minimum (If connected to different Inputs)

RF Input Power +20 dBm maximum

Switching Speed 1 microsecond

(After command is received and processed)
(3 millisecond typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50MS-304 SOLID STATE MATRIX SWITCH

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands Matrix Commands:

Matrix, Set Input, Set Output, Read Input, Read

Output, Read All Inputs, Read All Outputs, Read Matrix

Paths

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connectors SMA female

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5×20 mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Ranges Operating: 0°C to +70°C

Storage: -55°C to +85°C

Physical Size See outline drawing 092-7407

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	07/23/2012		BAC 07/23/2012		
24239	07/15/2015	A	TRS 07/15/2015		

Page 2 of 2 JFW FORM E-7-F REV F