

SPECIFICATION SHEET
JFW MODEL 50PA-842
HANDOVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	500-6000 MHz
Configuration	8 x 16 Handover System (See Block Diagram 092-7874 for attenuator addressing) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 19RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Attenuators to 95dB at startup (see ATTEN command) Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.8:1 maximum
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-63 dB (whichever is greater)
Insertion Loss	44 dB maximum 33 dB typical @ 500 MHz 42 dB typical @ 6000 MHz
Isolation	49 dB minimum (Input to Input) 55 dB minimum (Output to Output)
RF Input Power	+30 dBm average +36 dBm (no damage)
Switching Speed	1 microsecond typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PA-842
HANDOVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:
 Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:
 Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA female

AC Supply


100-240 VAC @ 47-63 Hz

Operating Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-7873

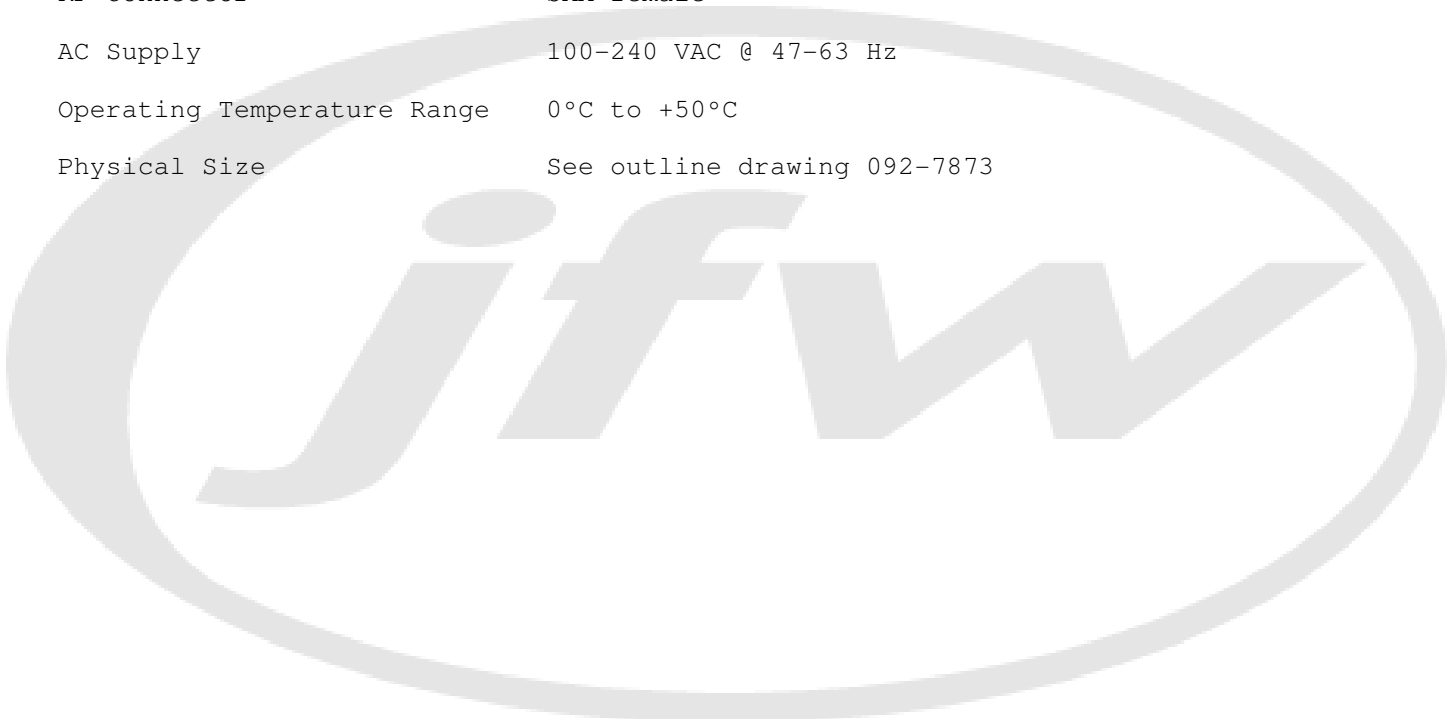

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	11/14/2013		CLK 11/14/2013				
24239	06/05/2014	A	TRS 06/05/2015				