## SPECIFICATION SHEET JFW MODEL 50PA-673 HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 700-3000 MHz

Configuration 12 x 4 Handover Test System

(see block diagram 092-5634 for attenuator addressing)

(all ports are bi-directional)

(full fan-out i.e. every path has its own attenuator)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 8RU high

Impedance 50 Ohms nominal

Attenuation Range 0-127 dB in 1 dB steps

Startup/Default States Maximum attenuation (see ATTEN STARTUP command)

(configurable) DHCP enabled (see NET command)

4 Ethernet users (see NET USERS command)

Prompts off (see PROMPT command)

VSWR 1.5:1 typical

1.7:1 maximum

Insertion Loss 29.7 dB typical @ 700 MHz

34.2 dB typical @ 3000 MHz

Attenuation Accuracy  $\pm$  0.5 dB or 2% typical

± 0.75 dB or 2% maximum
(whichever is greater)
(guaranteed monotonic)

Power Divider Isolation 20 dB minimum

RF Input Power 1 Watt average

Switching Speed 10 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

AC Supply 100-240 VAC @ 47-63 Hz

4 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-004, JFW #025-018

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

## --CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

## SPECIFICATION SHEET JFW MODEL 50PA-673 HANDOVER TEST SYSTEM

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:
Atten, Set Path, Read Path, Read All Paths, Set
Attenuator, Read Attenuator, Set All Attenuators, Read
All Attenuators, Read All Extended, Fade Attenuator,
Variable Attenuator Handover, Block, Set Block, Read
Block, Read All Blocks, Fade Block, Variable Block
Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

N or SMA female

Temperature Range

 $0^{\circ}C$  to  $+50^{\circ}C$ 

Physical Size

See outline drawings 092-5635 (50PA-673 SMA) 092-7620 (50PA-673 N)

ECR/ECN # DATE REV APPR / DATE ECR/ECN # DATE REV APPR / DATE

07/19/2011 TRS 07/19/2011

22526 02/19/2013 A TRS 02/19/2013

24239 09/09/2014 B TRS 09/09/2014

Page 2 of 2 JFW FORM E-7-F REV F