| SPECIFICATION SHEET JFW MODEL 50PA-912 HANDOVER TEST SYSTEM | JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com |
|---|--|
| Frequency Range | 2-6 GHz |
| Configuration | 8 X 8 Handover Test System (See block diagram 092-6869) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel) |
| Enclosure Type | 19 inch rack mount @ 9RU high |
| Impedance | 50 Ohms nominal |
| Attenuation Range | 0-95 dB in 1 dB steps |
| Startup/Default States (configurable) | Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command Prompts off (see PROMPT command) |
| | All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users. |
| VSWR | 1.6:1 maximum |
| Attenuation Accuracy (guaranteed monotonic) | ± 0.50 dB 1-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) |
| Insertion Loss | 37 dB maximum 29 dB typical @ 2 GHz 34 dB typical @ 6 GHz |
| Isolation | 53 dB minimum (In 1-8 to In 1-8) 53 dB minimum (Out 1-8 to Out 1-8) |
| RF Input Power | +30 dBm average |
| Switching Speed | 1 microsecond typical (after command is received and processed) (3 milliseconds typical processing time) |
| Manual Control | 20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad) |
| Remote Control | Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud) |

--CONTINUED--

JFW FORM E-7-F REV F

Page 1 of 2

| SPECIFICATION SHEET JFW MODEL 50PA-912 HANDOVER TEST SYSTEM | JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com |
|---|---|
| Remote Commands | Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover |
| | System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt |
| RF Connector | SMA female |
| Operating Temperature Range | 0°C to +50°C |
| AC Supply | 100-240 VAC @ 47-63 Hz 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse#215-002, JFW#025-021 |
| Physical Size | See outline drawing 092-8131 |

| ECR/ECN # DATE | REV APPR / DATE | ECR/ECN # DATE | REV APPR / DATE | |
|----------------|-----------------|----------------|-----------------|--|
| 10/22/2014 | CLK 10/22/2014 | | | |
| | | | | |
| | | | | |
| | | | | |