

**SPECIFICATION SHEET****JFW MODEL 50PA-951****PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
 Phone: 317-887-1340  
 sales@jfwindustries.com  
 www.jfwindustries.com

Frequency Range	500-6000 MHz	
Configuration	16 x 3 LC Handover Test System (see block diagram 092-8351 for attenuator addressing) (all ports are bi-directional) (limited fan-out configuration) (the ADMIN password is located on rear panel)	
Enclosure Type	19 inch rack mount @ 4RU high	
Impedance	50 Ohms nominal	
Attenuation Range	0-95 dB in 1 dB steps	
Startup/Default States (configurable)	Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)  All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.	
VSWR	1.7:1 maximum < 1.5:1 typical (ANT ports) < 1.6:1 typical (J ports)	
Insertion Loss	ANT1-16 to J1,3	31.2 dB maximum 29.9 dB typical
	ANT1-16 to J2	35.5 dB maximum 33.9 dB typical
Power Divider Isolation	20 dB minimum	
Attenuation Accuracy	± 0.50 dB	1-3 dB
	± 0.75 dB	4-7 dB
	± 1.00 dB	8-11 dB
	± 1.25 dB or 4%	12-95 dB (whichever is greater) (guaranteed monotonic)
RF Input Power	+23 dBm average	
Switching Speed	1 microsecond typical (after command is received and processed) (3 milliseconds typical processing time)	

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 50PA-951**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)
Remote Commands	Attenuator Control Commands: Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover  System Commands: Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt
RF Connector	N or SMA female
AC Supply	100-240 VAC @ 47-63 Hz 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021
Temperature Range	0°C to +50°C
Physical Size	See outline drawing 092-8350

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	07/10/2015		TRS 07/10/2015				