

SPECIFICATION SHEET
JFW MODEL 50PA-458
HANDOVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	700-3000 MHz
Configuration	6 x 4 Handover Test System (see block diagram 092-6012 for attenuator addressing) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 5RU high
Impedance	50 Ohms nominal
Attenuation Range	0-127 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command)
VSWR	1.7:1 maximum
Insertion Loss	26 dB maximum 20 dB typical @ 700 MHz 25 dB typical @ 3000 MHz
Attenuation Accuracy	± 0.50 dB or 2% typical ± 0.75 dB or 2% maximum (guaranteed monotonic)
Isolation	40 dB minimum (Input to Input) 46 dB minimum (Output to Output)
RF Input Power	+26 dBm average
Switching Speed	5 microseconds typical (after command received and processed) (3 millisecond typical processing time)
AC Supply	100-240 VAC @ 47-63 Hz 4 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-004, JFW #025-018
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PA-458
HANDOVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

N female

Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-6001



ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	11/25/2008		TRS 11/25/2008	23133	08/12/2013	C	CLK 08/12/2013
16569	12/01/2008	A	TRS 12/01/2008				
16588	12/05/2008	B	TRS 12/05/2008				