

SPECIFICATION SHEET
JFW MODEL 50PMA-098
TRANSCEIVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	2-6 GHz
Configuration	5 Port Transceiver Test System (see block diagram 092-6730 for attenuator addressing) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19" rack mount @ 2RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompt = "JFW>> " (see PROMPT command)
VSWR	1.7:1 maximum 1.5:1 typical
Attenuation Accuracy	± 0.7 dB 1-7 dB ± 1.0 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater) (guaranteed monotonic)
Insertion Loss	29 dB maximum 23 dB typical @ 2 GHz 27 dB typical @ 6 GHz
Power Divider Isolation	20 dB minimum 23 dB typical
RF Input Power	1 Watt average
AC Supply	100-240 VAC @ 47-63 Hz 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PMA-098
TRANSCEIVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)
 RS-232 (up to 115200 Baud)

Remote Commands Attenuator Control Commands:
 Atten, Set Path, Read Path, Read All Paths, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover, Set 2nd 32dB Bit

System Commands:
 Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector SMA female

Operating Temperature Range 0°C to +50°C

Physical Size See outline drawing 092-6729

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	01/09/2015		CLK 01/09/2015				